Please visit www.blueox.com for the latest version of these installation instructions.



#### **BX2686**

## 2021-2025 Ford F-150

# (Includes Raptor, ACC, EcoBoost, Hybrid, & Shutters) Installation Instructions

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

Serial Number

Attachment Tab Height: 16.5"

Attachment Tab Width: 34"

Please ensure tow bar being used is compatible with the baseplate tab width.

- 1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- 2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.









If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions



Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Bolt Torque Specifications Torque in Foot-Pounds for Inch Bolts					
<b>Bolt Size</b>	Grade 5	Grade 8			
1/4"	10	14			
5/16"	19	29			
3/8"	33	47			
7/16"	54	78			
1/2"	78	119			
5/8"	154	230			
3/4"	257	380			

<b>Bolt Torque Specifications</b> Torque in Foot-Pounds for Metric Bolts						
Grade 8.8	Grade 10.9					
6	8					
16	22					
31	40					
54	70					
89	117					
161	230					
222	318					
	oot-Pounds for Grade 8.8  6 16 31 54 89 161					

**Instruction Notes:** The bumper and tow hooks are removed and the bumper is reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 Tail Light Wiring Kit is recommended for this vehicle.

#### **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- · When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that ALL electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage
  and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or
  missing parts.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions


Tools Required			
Torque Wrei Drill Loctite® REI 1/2" Drill Bit 5/16" Nut Dr 7MM Socke 10MM Sock 15MM Sock	7/16" Socket 7/16" Wrench 9/16" Socket rivers 9/16" Wrench t 3/4" Socket et 3/4" Wrench		
7	1 9 12	12 5 8 14 14 15 15 4 15 15 4 15 15 15 15 15 15 15 15 15 15 15 15 15	
Item No.	Part No.	Description	Qt <u>v.</u>
1	61-4029		
2	61-8455	BX2686 Baseplate, DS	1
		BX2686 Baseplate, PS	
		Attachment Tab Assembly with Hole	
		Electrical Bracket, 90° Bend	
6	201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	5
7	201-0068	1/2"-13 x 1-3/4" Hex Head Bolt, Grade 5, ZP	8
8	201-0192	#10-32 1/2" Round Slotted Head Screw	2
9	201-1147	M10-1.5 x 20MM Lg. Flanged Hex Head Bolt, GR	D.8.8.4
		#10-32 Hex Nut	
11	202-0094	1/2"-13 Hex Nylon Insert Lock Nut, ZP	4
12		1/4"-20 Hex Nylon Nut, ZP	
13		1/4" Flat Washer, ZP	
		7/16" Flat Washer, ZP	
		1/2" Lock Washer, ZP	
		#10 Lock Washer, ZP	
		Class IV Safety Cables	
		1/2" Quicklink, ZP	
		Black Cap Plug Receiver	
	,		

#### **Important:**

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions

### **Standard Models Bumper Removal:**

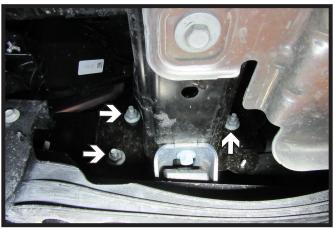

Using a 21MM socket, remove the three
 nuts from behind the bumper. Do this on both sides of the vehicle.







2. Start to remove the bumper. As the bumper is removed unplug the main electrical (left) and shutters (center) from passenger side of the vehicle. Then unplug electrical on top of the shutter housing (right) on the driver side of the vehicle. Set bumper aside to be reinstalled later.

#### Continue to page 10

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions


### Raptor & Tremor 402A Bumper Removal:




1. Using a 15MM socket, remove the two (2) bolts for the back of the belly pan.



 Using a 13MM socket, remove the four (4) bolts, two (2) from each side, under the tow hooks. Remove belly pan and set aside to be reinstalled later.

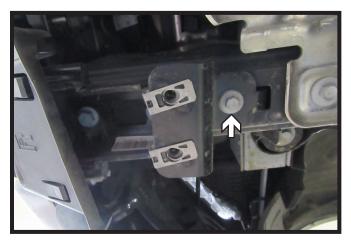

3. Using a 13MM socket, remove the one (1) bolt from the belly pan bracket. Remove bracket and set aside to be reinstalled later. Do this on both sides of the vehicle.

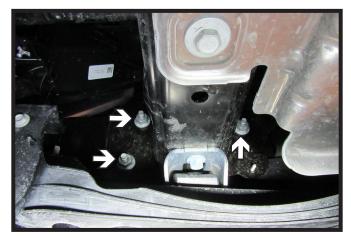

Using a 21MM socket, remove the three
 nuts from behind the bumper. Do this on both sides of the vehicle.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions








5. Start to remove the bumper. As the bumper is removed unplug the main electrical (left) and shutters (center) from passenger side of the vehicle. Then unplug electrical on top of the shutter housing (right) on the driver side of the vehicle. Set bumper aside to be reinstalled later.


Continue to page 10

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions

### **Hybrid Models Fascia/Bumper Removal:**

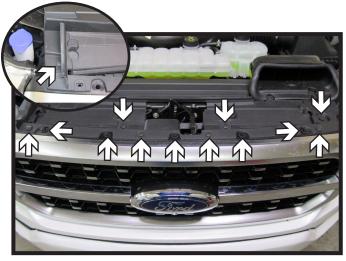

1. Remove the thirteen (13) push pins from the fascia cover.

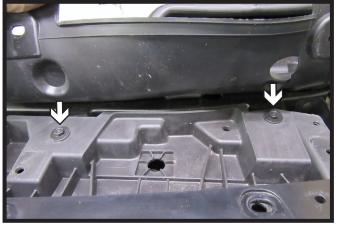

 Lift up fascia cover. Using a 10MM socket, remove the two (2) bolts from the top of the fascia. Do this on both sides of the vehicle.



3. Using a 7MM socket or Phillips screw driver, remove the two (2) bolts from along the wheel well edge. Do this on both sides of the vehicle.



 Remove the middle fascia piece by grabbing the edge and pulling outward. Set piece aside to be reinstalled later.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions





5. Using an 8MM socket, remove the two (2) inside bolts, one (1) on each side of the vehicle.



 Lift the fascia cover and unplug the electrical connections (inset). Remove fascia and set aside to be reinstalled later.



7. Coming from underneath the vehicle, use a 21MM socket to remove the two (2) outer nuts from behind the bumper. Do this on both sides of the vehicle.



 Coming from above the bumper, use a 21MM socket to remove the one (1) inside nut from behind the bumper. Do this on both sides of the vehicle.

## (Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters) Installation Instructions



9. Unplug the main electrical on the passenger side of the vehicle.




10. Unplug the electrical on the driver side of the vehicle (white), unsnap the wire loom on top of the bumper and then unplug electrical connection on the passenger side of the vehicle (gray). Remove bumper and set aside to be reinstalled later.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions


### **Baseplate Installation:**



 Remove the rubber piece from the tow hook. Do this on both sides of the vehicle.

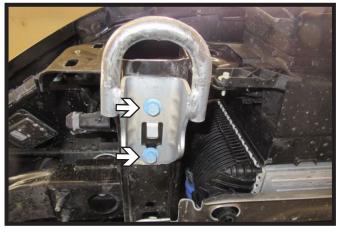

 Using a 15MM socket, remove the two (2) bottom bolts from the tow hook. Remove tow hook and set aside, it will not be reinstalled. Do this on both sides of the vehicle.

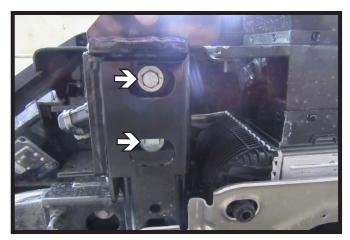

3. Slide baseplate onto tow hook housing and install two (2) 1/2" bolts with hardware into the bottom holes. Do this on both sides of the vehicle.




4. Using the baseplate as a template, use a 1/2" drill bit to drill two (2) holes through the frame of the vehicle. Install two (2) 1/2" bolts with hardware. Do this on both sides of the vehicle.

\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\*

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions



 Raptor & Tremor 402A Models: Reinstall belly pan bracket before installing baseplate safety cables. Do this on both sides of the vehicle.

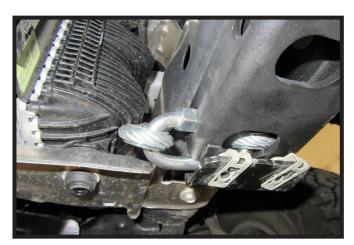

6a. Raptor & Tremor 402A Models: Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on BOTH sides of the vehicle.



6b. All Other Models: Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on BOTH sides of the vehicle.

## (Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters) Installation Instructions



7. **Hybrid Models:** On the backside of the fascia, trim the plastic behind the tow hook opening to allow clearance for the baseplate. Do this on both sides of the vehicle.



8a. **Standard Models:** Reinstall the bumper and reconnect all electrical connections.



8b. **Hybrid Models:** Reinstall the bumper, fascia, fascia cover and reconnect all electrical connections.



8c. Raptor & Tremor 402A Models: Use the four (4) provided shorter M10 bolts to reinstall skid plate. Reinstall the bumper and reconnect all electrical connections.

(Includes Raptor, Adaptive Cruise Control, EcoBoost, Hybrid, & Shutters)
Installation Instructions

#### **CUSTOMER SERVICE COMMITMENT**

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2024 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

#### **General Information**

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

### **Notice To Baseplate Installer**

- 1. It is YOUR responsibility to watch for:
  - Oil cooler and air conditioner lines
  - Electrical wires and hoses
  - Missing parts or attaching points on the frame
  - \*\* If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.


#### **Permanent Baseplate Safety Cable Installation**

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.


These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



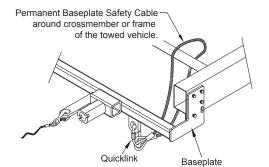

## Option #2

(Baseplates with out Convenience Link Tabs)

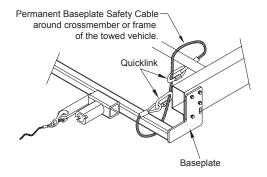

# BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <a href="http://blueox.com/warranty/">http://blueox.com/warranty/</a> to register your warranty

