Please visit www.blueox.com for the latest version of these installation instructions.



BX1755 2020-2024 Chevy Blazer (2.0L Turbo) (Includes Top Shutters) (No ACC) Installation Instructions

Attachment Tab Height: 13.5"

Attachment Tab Width: 20"

Serial Number

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- Many Blue Ox[®] baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Bolt Tor	que Sp	ecifi	cati	ons
Torque in Fo	ot-Poun	ds for	Inch	Bolts
			_	

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Instruction Notes: The fascia cover, fascia, and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 Tail Light Wiring Kit is recommended for this vehicle.



1. Next to the tail light, pull on the black piece from the top to remove. Do this on both sides of the vehicle.



2. Using a 7MM socket, remove the two (2) bolts attaching the tail light to the frame. To remove, push tail light side ways slightly to unsnap and then pull straight back. Do this on both sides of the vehicle.


NOTICE


- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite[®] Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.

(9)-	(Includes Top Shutte	BX1755 Chevy Blazer (2.0L Turbo) ers) (No Adaptive Cruise Contr llation Instructions	rol)
			Tools Required Large Vise Grip Flat Screwdriver Utility Knife Torque Wrench Drill Loctite® RED 3/8" Drill Bit 7MM Socket 10MM Socket 7/16" Socket 7/16" Wrench 9/16" Wrench T15 Torx
Item No.	⁽¹³⁾ BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No.		Qty.
<u>Item No.</u>	4 PIN CONNECTOR 6 PIN CONNECTOR Part No.		
	4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978	<u>Description</u> 3/8"-16 Whiz Nut w/ 14" Wire	2
1 2		Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire	2 5
1 2 3	BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS	2 5 1
1 2 3 4	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 	<u>Description</u> 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS	2 5 1 1
1 2 3 4 5	BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS BX1755 Baseplate, PS	2 5 1 1 2
1 2 3 4 5 6	BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch	2 5 1 1 1 2 Mount, Short1
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS BX1755 Baseplate, PS	2 5 1 1 1 Mount, Short1 ZP1
1	BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw	2
1	BREAKAWAY SWITC 4 PIN CONNECTOR 6 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192 201-0440	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw	2 5 1 1 2 Mount, Short1 ZP1 ZP1 2 /
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP	2 5 1 Mount, Short 1 ZP 1 2 1 2 1 2 2 1 3 2
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut	2 5 1 Mount, Short 1 ZP 1 2 1
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192 201-0192 201-0440 201-0979 202-0047 202-0090	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 	2 5 1 1 2 Mount, Short1 ZP1 ZP1 2 2 2
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192 201-0440 201-0979 202-0047 202-0090 202-0102	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 	2 5 1 2 Mount, Short 1 2 Mount, Short 1 2 7
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw 3/8"-16 Hex Nylon Insert Lock Nut, ZP 	2 5 1 Mount, Short 1 ZP 1 2 1 2 1 2 1 2 1 2 1 3 2 1 3 2 1 1 1 2 1 1 1 2 1
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut 	2
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192 201-0192 201-0440 201-0440 201-0979 202-0047 202-0090 202-0047 202-0090 202-0102 203-0003 203-0054	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw #10-32 1/2" Round Slotted Head Screw #10-32 1/2" Slot Round Head Screw #12-14 x 1" Self Drilling Screw, ZP #10-32 Hex Nut	2 5 1 1 2 Mount, Short 1 2 7 1 2 7 1 3 2 2 1 3 2 2 1 3 2 1 1 1 1 1 1 1 1 2 2 1 3 2 2 1 3 2 2 1 3 2 2 1 3 2 2 1 3 2 2 1 3 2 2 1 2 1
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 6 PIN CONNECTOR Part No. 61-4978 61-5208 61-8594 61-8595 62-3469 101-10408 201-0050 201-0192 201-0440 201-0979 202-0047 202-0090 202-0090 202-0102 203-0003 203-0054 226-0049(not shown)	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire	2 5 1 1 2 Mount, Short1 2 2 1 3 1 2 1 2 1 3 1 2 1 3 1 2 1 3 1 2 1 3 1 2 1 1 2 1 3 1 2 1 3 1 2 1 1 2 1 3
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire BX1755 Baseplate, DS BX1755 Baseplate, PS Attachment Tab Assembly with Hole Electrical Bracket w/ Breakaway Switch 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, 2 #10-32 1/2" Round Slotted Head Screw 3/8"-16 x 1-1/2" Slot Round Head Screw 	2 5 1
1	BREAKAWAY SWITC 4 PIN CONNECTOR Part No. 6 PIN CONNECTOR Part No. 61-4978	Description 3/8"-16 Whiz Nut w/ 14" Wire 3/8" Nut Plate w/ 14" Wire	2

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

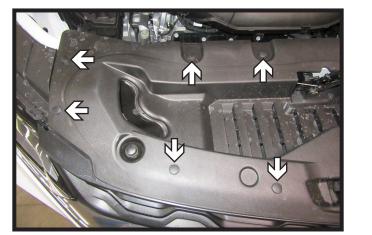

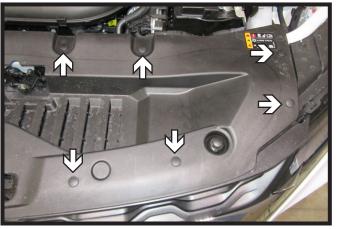

1. Remove the twelve (12) push pins from the fascia cover, there are six (6) on each side of the vehicle. Remove and set fascia cover aside to be reinstalled later.



2. Using a T15 Torx, remove the six (6) bolts, three (3) on each side, from the top of the fascia.




3. Using a T15 Torx, remove the four (4) bolts from the wheel well edge in front of the tire. Do this on both sides of the vehicle.



4. Unsnap the fender trim by pulling outward away from the fascia. Unplug the electrical. Place a rag or soft item between the trim and fascia to hold trim out of the way and prevent damage to the fascia. Do this on both sides of the vehicle.



5. Using a T15 Torx, remove the one (1) bolt from the fascia joint under the fender trim. Do this on both sides of the vehicle.

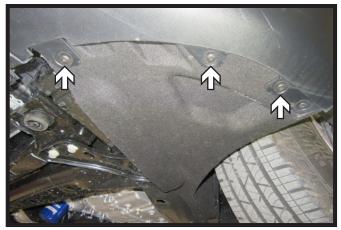


6. Using a T15 Torx, remove the six (6) bolts from the underside of the vehicle in front of the tire. There are three (3) on each side.



7. Using a 7MM socket, remove the two (2) bolts from the underside of the vehicle in the center.




 Pull back the wheel well liner. Using a 7MM socket, remove the three (3) bolts from behind the light. Do this on both sides of the vehicle.

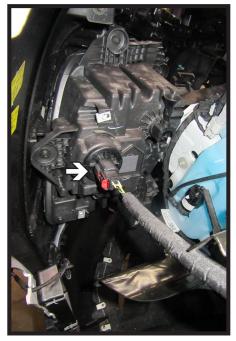

9. Pull the fascia away from the vehicle to unsnap. Unplug headlight on both sides of the vehicle, remove the fascia and set aside to be reinstalled later.




10. Using a 7MM socket, remove the five (5) bolts from the plastic shroud. There is one (1) on each side and three (3) under the vehicle. Remove shroud and set aside to be reinstalled later.

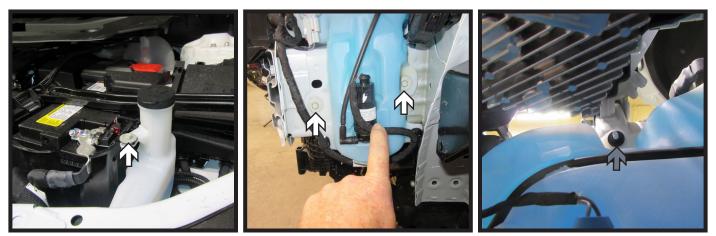


11. Using a 10MM socket, remove the three (3) bolts (white) and one (1) nut (gray) from the windshield washer fluid reservoir on the driver side of the vehicle. Disconnect and plug all lines. Remove reservoir and set aside to be reinstalled later.



12. Remove the temperature sensor from the bracket on the back side of the fascia. Using a reciprocating saw, cut the bracket as shown. Relocate temperature sensor, connecting it to upper loom using two (2) provided zip ties.

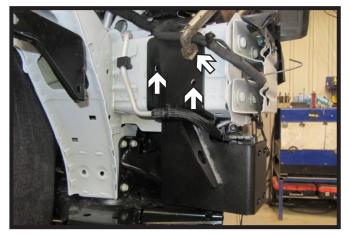

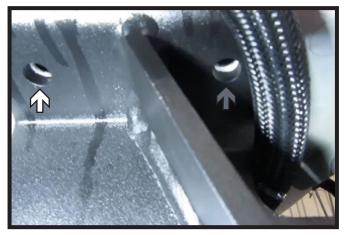


13. Slide the passenger side plate onto the vehicle ensuring that it is as high as possible and the front side is against the flange on the frame. Hold in place with vise grips. Using a 3/8" drill bit, drill the top three (3) holes and back bottom hole using the baseplate as a template (white). Mark the front bottom hole. Remove passenger side plate and using 3/8" drill bit, drill marked front bottom hole (gray). Reinstall passenger side plate using five (5) 3/8" bolts and hardware.


** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. **



14. Hold the driver side plate and cross bar in place. Where the cross bar attaches to the passenger side plate, start one (1) 3/8" bolt and hardware. Use a vise grip to hold the driver side plate in place.

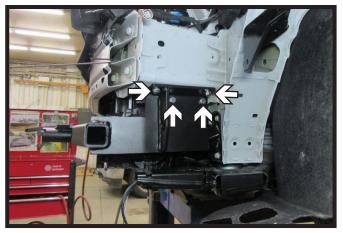

- 15. Using a 3/8" drill bit, drill the four (4) holes on the driver side of the vehicle using the end plate as a template. Then install four (4) 3/8" bolts with hardware.
- ** Use Loctite[®] Red on all bolt threads and tighten all bolts to the appropriate torque. **

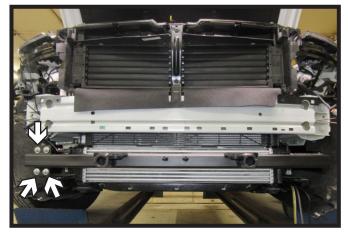

- Install the remaining three (3) 3/8" bolts with hardware attaching the cross member to the passenger side plate.
- ** Use Loctite[®] Red on all bolt threads and tighten all bolts to the appropriate torque. **



17. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



 Using a utility knife, remove the side pieces as indicated from the plastic shroud. Reinstall shroud using the bottom three (3) existing bolts.



 Reinstall the windshield washer fluid reservoir on the driver side of the vehicle. Reconnect all lines.



20. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the fascia and fascia cover. Reconnect all electrical connections.



21. **Optional**: Install the breakaway to the electrical bracket with one (1) 1/4" bolt with hardware.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2022 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

Page 10 of 10

General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame


** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.

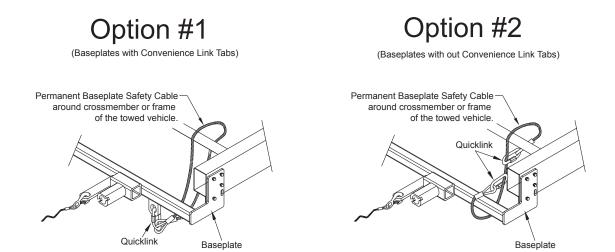

BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit http://blueox.com/warranty/ to register your warranty

