



BX4102

2002-2009 Hummer H²

Installation Instructions

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

Serial Number

Attachment Tab Height: 22.5"

Attachment Tab Width: 32.25"

Please ensure tow bar being used is compatible with the baseplate tab width.

1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318



WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.


BX4102

2002-2009 Hummer H²

Installation Instructions

Tools Required

Right Angle	Drill
Flat Screw Driver	17/32" Drill Bit
Small Vise Grips	18MM Socket
Large Vise Grips	7/16" Socket
Hammer	3/4" Socket
Loctite® RED	

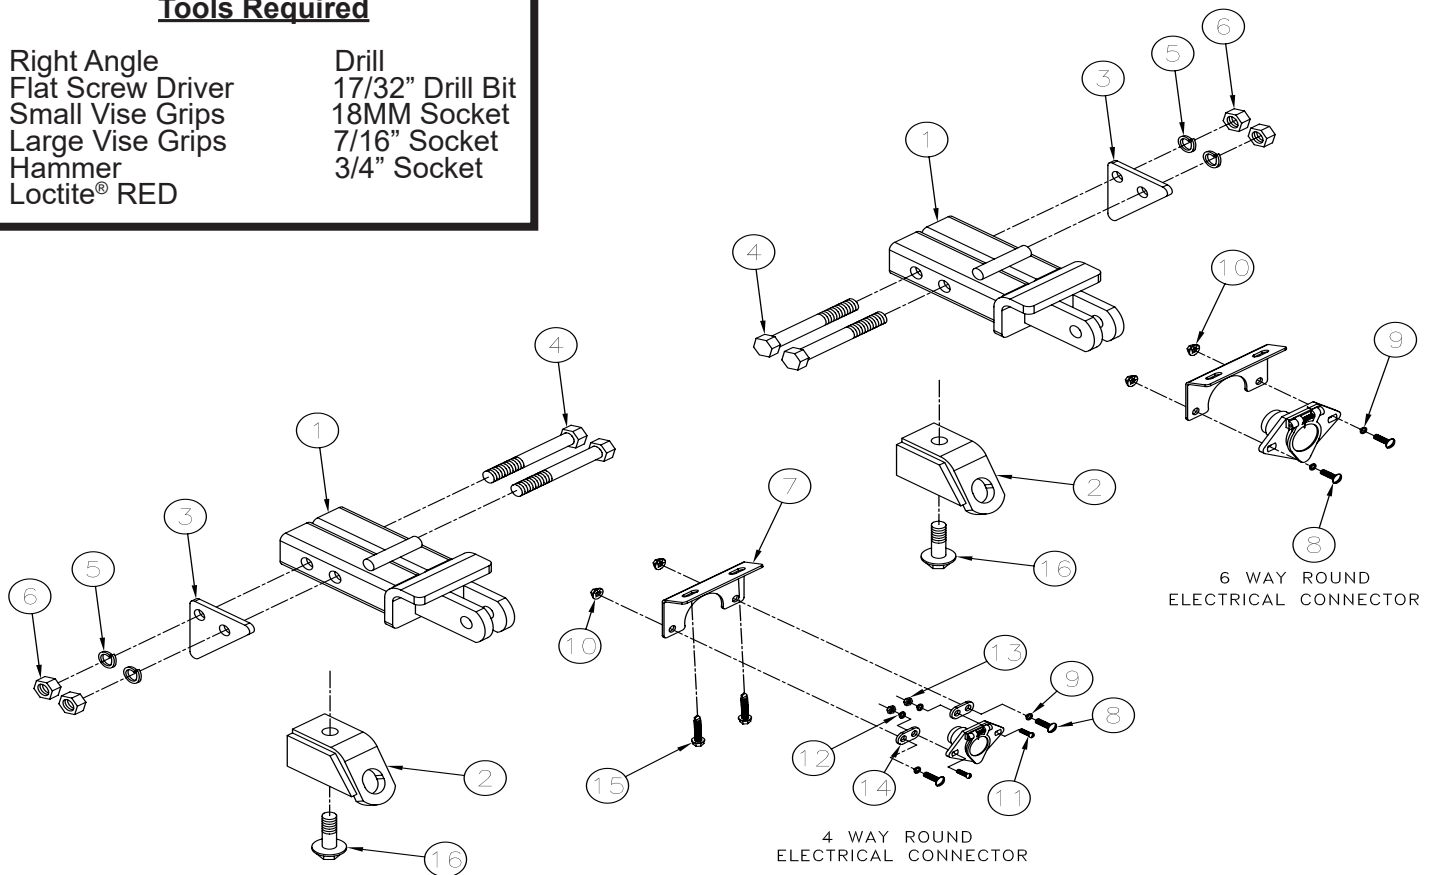

Item No.	Part No.	Description	Qty.
1.....	61-6034	BX4102 Baseplate.....	2
2.....	61-6218	Convenience Link.....	2
3.....	101-6897	Backing Plate	2
4.....	201-0147	1/2"-13 x 4-1/2" Hex Head Bolt, Grade 5, ZP	4
5.....	203-0012	1/2" Lock Washer, ZP	4
6.....	202-0005	1/2"-13 Hex Nut, ZP.....	4
7.....	101-6898	Electrical Bracket, 70° Bend.....	1
8.....	201-0111.....	1/4"-20 x 3/4" Slot Truss Head Screw	2
9.....	203-0008	1/4" Lock Washer, ZP	2
10.....	202-0069	1/4"-20 Hex Flange Whiz Lock Nut, ZP	2
11.....	201-0192	#10-32 1/2" Round Slotted Head Screw.....	2
12.....	203-0054	#10 Lock Washer, ZP	2
13.....	202-0047	#10-32 Hex Nut	2
14.....	101-5822	4-Way Connector Adapter, ZP	2
15.....	201-0654	#10-16 x 1" Self Drilling Screw, ZP.....	2
16.....	Existing.....	Metric Bolt	2

Important:

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.


BX4102
2002-2009 Hummer H²
Installation Instructions

Instruction Notes: The metal bumper is removed and reinstalled for the baseplate installation. The tow hooks are removed but not reinstalled during installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8869 Tail Light Wiring Kit is recommended for this vehicle.

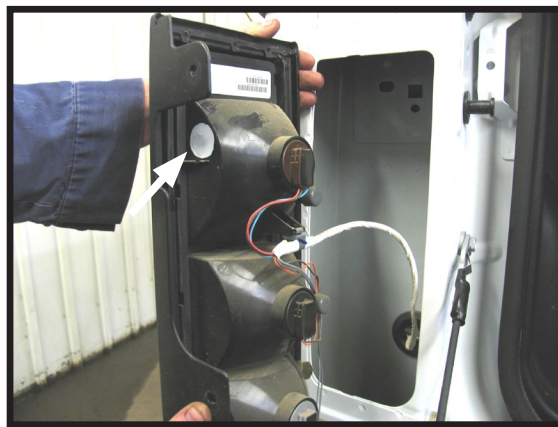


Drill a hole according to the tail
light wiring kit instructions.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the baseplate if it is damaged or missing parts.


BX4102
2002-2009 Hummer H²
Installation Instructions

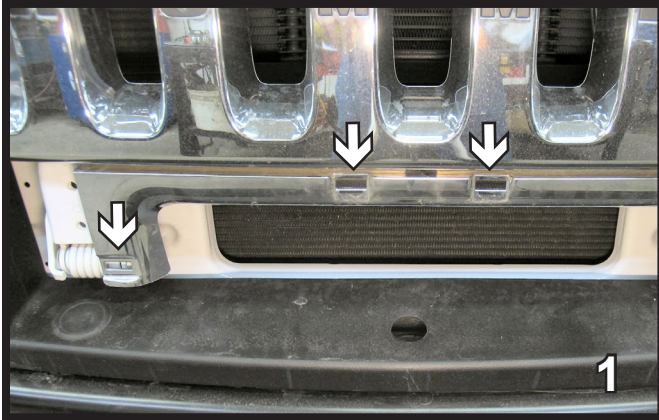

1. Pull the center grill insert forward to release the four clips, one on each side and two in the middle. Set insert aside to be reinstalled later. The passenger's side is shown in the photo above.



2. Remove the two rubber inserts from the top of the bumper. Set the rubber inserts aside to be reinstalled later.

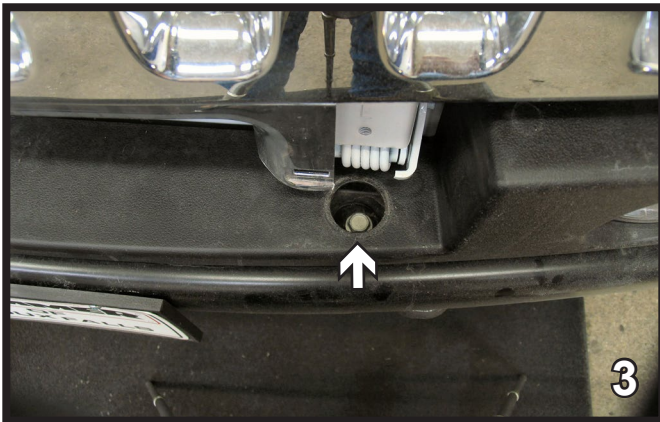


3. Using the 18MM socket, remove one metric bolt from the top of the bumper. Do this to both sides of the vehicle. Set bolts aside to be reinstalled later.





4. Just below the bumper, remove two metric bolts with the 18MM socket. Pull the metal bumper forward and disconnect the fog lights. Set bolts and metal bumper aside to be reinstalled later.

BX4102
2002-2009 Hummer H²
Installation Instructions

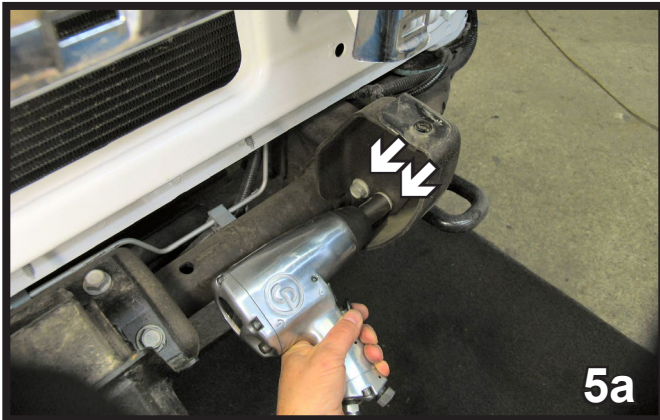

5. Using the 18MM socket, remove three metric bolts from the tow hook, two on the inside (see photo 5a) and one on the outside (see photo 5b). Pull tow hook forward and set aside. Do this to both sides of the vehicle. The tow hooks will not be reinstalled. Please return them to the customer.

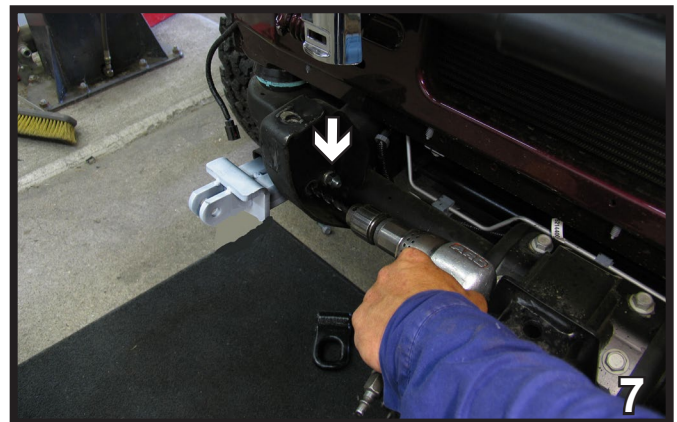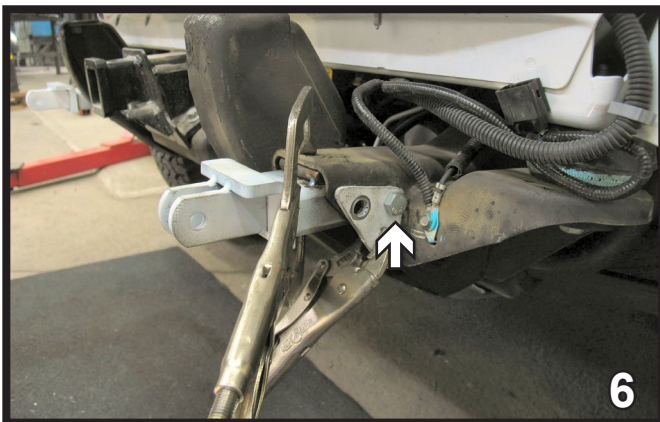

6. Insert the baseplate weldment into the tow hook opening and align the backing plate with the outside tow hook hole, 1/4" forward of the frame rail, clamp in place and install the 4 1/2" hex bolt, 1/2" lock washer and 1/2-13 hex nut. Do this to both sides of the vehicle.

7. Using the baseplate weldment as a template, drill through the forward existing hole on the inside of the frame rail with the right angle drill and the 17/32" drill bit. Do this to both sides of the vehicle. If a right angle drill is not available, it may be necessary to remove the winch bracket to allow room for drilling.

**** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. ****

BX4102
2002-2009 Hummer H²
Installation Instructions



8. Reinstall the metal bumper fascia using upper existing bolts but do not tighten completely. Install the convenience link weldment to the lower existing bolt, tighten all bolts completely and reinstall the rubber inserts, fog lights and grill insert.



9. Using the 1" self tapping screw, install the electrical bracket just below the license plate bracket while ensuring enough clearance for the bracket cover to open.

**** Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. ****



This vehicle is equipped with standard tabs.

BX4102
2002-2009 Hummer H²
Installation Instructions

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2022 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com

General Information

1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/or recalls.
2. **It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip.** Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
3. **It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.**
4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

1. It is YOUR responsibility to watch for:

- Oil cooler and air conditioner lines
- Electrical wires and hoses
- Missing parts or attaching points on the frame

**** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.**

Permanent Baseplate Safety Cable Installation


Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.


Option #1

(Baseplates with Convenience Link Tabs)

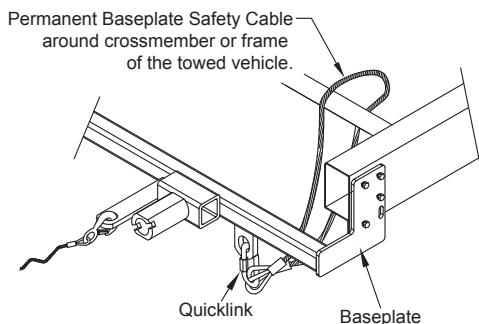

Option #2

(Baseplates with out Convenience Link Tabs)

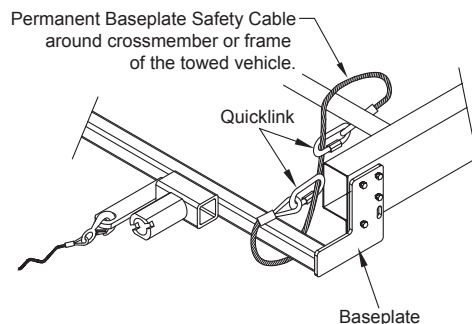

BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <http://blueox.com/warranty/> to register your warranty



BLUE OX