Please visit www.blueox.com for the latest version of these installation instructions.



BX2665 2017-2020 Lincoln MKZ (Includes Hybrid) (No Adaptive Cruise Control) Installation Instructions

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

Serial Number

- Blue Ox[®] towing products and accessories are intended to be installed by Blue Ox[®] Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox[®] Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- Many Blue Ox[®] baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the front of your vehicle looks different than this, please contact us at (402)385-3051.

Reference your vehicle owner's manual for manufacturer's towing specifications.

Attachment Tab Height: 13"

Attachment Tab Width: 33 3/4"

Please ensure tow bar being used is compatible with the baseplate tab width.

Bolt Torque Specifications				
Bolt Size	Grade 5	Grade 8		
1/4"	10	14		
5/16"	19	29		
3/8"	33	47		
7/16"	54	78		
1/2"	78	119		
5/8"	154	230		
3/4"	257	380		

Bolt Torque Specifications Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318



Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.

Instruction Notes: The fascia and windshield washer fluid reservoir are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.

The BX8848 4-Diode Wiring Kit is recommended for this vehicle.


NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite[®] Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. DO NOT use the baseplate if it is damaged or missing parts.

Large Flat S Uti Phillips Torqu Tape Loc 3/8 7Mi 8Mi 10M 7/16 9/16 9/16 7/16	A Required A Vise Grip Corewdriver lity Knife Screwdriver ue Wrench Drill A Measure tite® RED " Drill Bit M Socket M Socket M Socket D" Nench D" Wrench D" Wrench	TEMS # 17 ARE TO BE USED AS NEEDED TO ADJUST THE SQUARE TUBES ON ITEMS 3 8.4 TO BE LEVEL WHEN THE WEILDMENTS ARE INSTALLED (4 PLACE)
Item No.	Part No.	TO THE VEHICLE FRAME <u>Description</u> Qty.
		Support Plate
		Driver Side BX2665 Baseplate1
		Passenger Side BX2665 Baseplate
		Attachment Tab Assembly with Hole
		Breakaway Bracket1
		1/4"-20 Hex Nylon Nut, ZP
17		
18		#10 Flat Washer, ZP2
		#10 Lock Washer, ZP2
)Class III Safety Cables2
)3/8" Quicklink, ZP2
22)Black Cap Plug Receiver2

Important:


Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/ or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

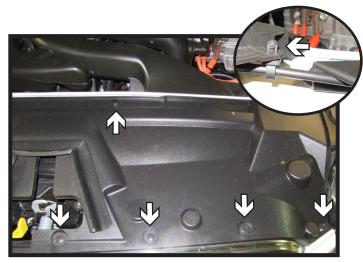


 Remove the ten (10) push pins from the fascia cover. There are five (5) on each side. On the driver side, remove one (1) push pin and unhook the cover. Set the cover aside.



2. Using a 10MM socket, remove the six (6) bolts from the top of the grill cover. There are three (3) on each side.

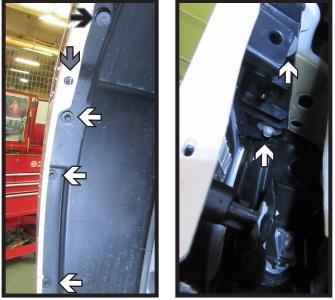


3. Using a 7MM socket, remove the three (3) bolts in front of the tire on the wheel well (white, left). Using a Phillips screwdriver, remove the one (1) screw (gray). Remove the one (1) push pin. Pull the wheel well cover back. Using an 8MM socket, remove the two (2) bolts (white, right). Do this for both sides of the vehicle.

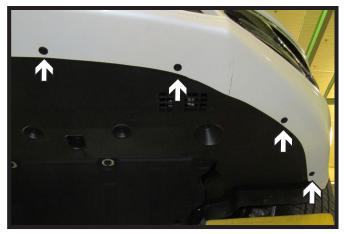

4. Using a 7MM socket, remove the eight (8) bolts from the underside of the fascia. There are four (4) bolts on each side.



5. Pull the corners of the fascia away from the vehicle disconnecting any electrical connections and set the fascia aside.

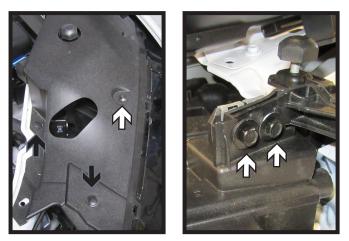

 Using a T25 Torx, remove the one (1) screw from the plastic headlight cover (white, left). Remove the two (2) push pins (black). Pull the plastic cover up. Using a 10MM socket, remove the two (2) exposed bolts (white, right). Do this for both sides of the vehicle.






7. Using a T30 Torx, remove the three (3) bolts from the headlight. Do this for both sides of the vehicle.



 Using a 10MM socket, remove the one (1) bolt from the bumper horn and remove the bracket. Do this for both sides of the vehicle.

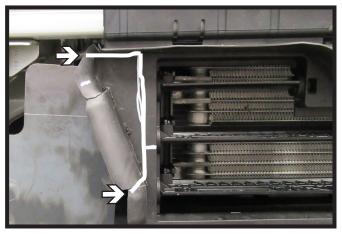


9. Using a reciprocating saw, trim the plastic shielding near the shutters on the passenger side, as shown.




10. Using a 1-1/4" hole saw, drill access holes in the side of the frame as shown and in the face of the lower support (inset). Do this on both sides of the vehicle.




11. Using a 3/8" drill bit, ream out the rear existing hole. Do this on both sides of the vehicle.

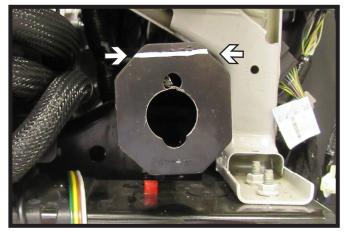


12. Using a reciprocating saw, trim the marked area on the front of the lower support. Do this on both sides of the vehicle.

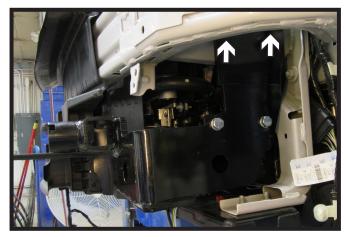


- 13. Install the baseplate onto the frame with the 3/8" hardware. Level the baseplate prior to fully tightening the bolts. Do this on both sides of the vehicle. (Upper bolts not pictured)
- ** Use Loctite[®] Red on all bolt threads and tighten all bolts to the appropriate torque. **

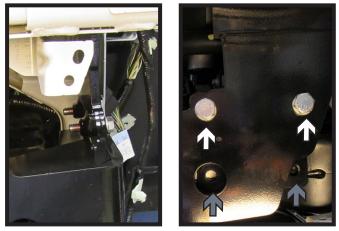


14. Install the lower support plate to the baseplate holes with the supplied 3/8" hardware (white) and fully tighten. Then using a 3/8" drill bit, drill the lower plate holes through the support (gray). Do this on both sides of the vehicle. Fully tighten all hardware.

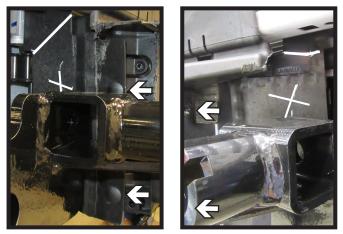

15. Using a reciprocating saw, trim the marked areas on both sides, behind the shutters. Remove two (2) push pins from both sides. (Bottom driver side pin not pictured)

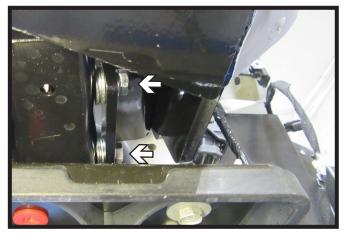


 Install the 3/8" hardware into the drilled lower support holes, and fully tighten the bolts, using washers as necessary to ensure tightness.

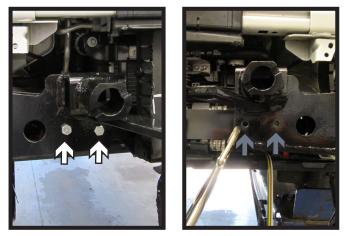

17. Slide the slotted bracket into place and clamp. Install with the supplied 3/8" hardware (white). On the passenger side, using 3/8" drill bit, drill into the bracket (gray). Install with the supplied 3/8" hardware and fully tighten.



18. **Optional Breakaway:** If installing a breakaway, using a reciprocating saw, cut the marked areas on both the plastic shutter shielding and the fascia. Using a 3/8" drill bit, drill into the baseplate. Install the breakaway with the supplied 3/8" hardware and fully tighten.

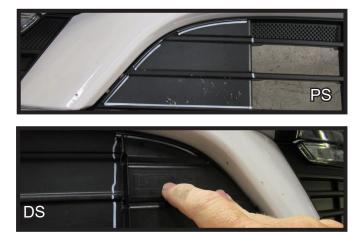

19. Using a reciprocating saw, trim the marked area on the passenger front of the fascia. Use this trimmed piece to mark and cut a similar shape on the driver side.



20. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



21. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the headlights, fascia, and fascia cover.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2022 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

General Information

- Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite[®] Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/ recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

Notice To Baseplate Installer

- 1. It is YOUR responsibility to watch for:
 - Oil cooler and air conditioner lines
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame

** If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.

Permanent Baseplate Safety Cable Installation

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.

These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit http://blueox.com/warranty/ to register your warranty

