

# 2019-2024 Kia Forte (Manual Only) (Includes GT) (No SCC or Round Fog Lights) Installation Instructions

Please read BOTH these Installation Instructions and the General Information sheet prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Technical Service Department at (402) 385-3051.
- 2. Many Blue Ox® baseplates are designed to use existing holes and hardware to mount the baseplate to the towed vehicle. Even though bolts are there, do not assume they are adequate for baseplate mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.





If the front of your vehicle looks different than this, please contact us at (402)385-3051.

#### **Serial Number**

Attachment Tab Height: 14.5"

Attachment Tab Width: 23"

### Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

<b>Bolt Size</b>	Grade 5	Grade 8	
1/4"	10	14	
5/16"	19	29	
3/8"	33	47	
7/16"	54	78	
1/2"	78	119	
5/8"	154	230	
3/4"	257	380	

#### **Bolt Torque Specifications**

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

### **▲** WARNING

Failure to read and follow these instructions could result in separation of the towed vehicle from the tow bar, causing property damage, loss of towed vehicle, personal injury or death.


#### Reference your vehicle owner's manual for manufacturer's towing specifications.

**Instruction Notes:** The fascia, belly pan and air baffle are removed and reinstalled for the baseplate installation. Some drilling and trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the baseplate is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the baseplate was designed for easy installation, it may be necessary to tailor the baseplate slightly to compensate for vehicle manufacturer's tolerances.


The BX8869 Tail Light Wiring Kit is recommended for Non-LED tail light models. The BX8848 Tail Light Wiging Kit is recommended for models with LED tail lights.

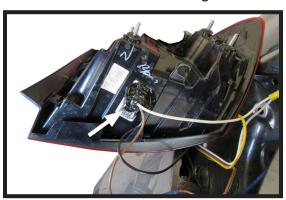

Drill a hole according to the tail light wiring kit instructions.

### **NOTICE**

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly before reinstalling the fascia.
- The baseplate is computer tested to your vehicle's GVWR, exceeding this weight will void the manufacturer's warranty.
- Be sure to use a sufficient amount of Loctite® Red on all bolt threads before tightening. Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the baseplate is in an accident, it must be replaced. DO NOT use it again! An accident can
  cause unseen damage and using it again could result in more damage or serious injury. DO NOT
  use the baseplate if it is damaged or missing parts.

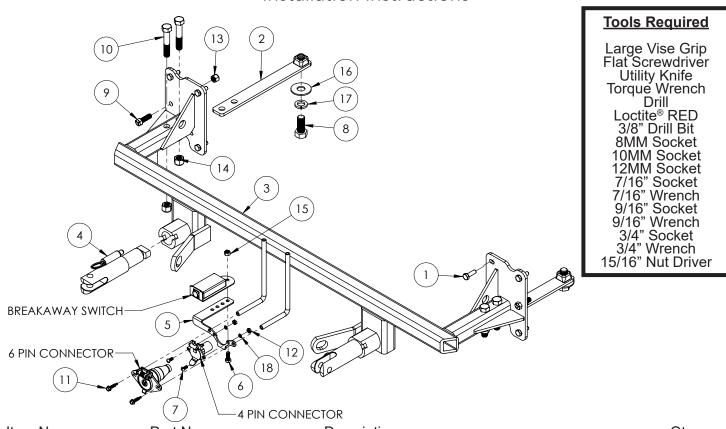

Part No.	Description	Qty.
Existing	8MM x 1.25" Bolt	8
61-8252	Inner Frame Mount	2
61-8253	BX2728 Baseplate	1
62-3468	Attachment Tab Assembly with Hole	2
101-9381	Electrical Bracket with Breakaway Switch Mount	1
201-0050	1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP	1
201-0192	#10-32 1/2" Round Slotted Head Screw	2
201-0368	3/8"-16 x 1-1/4" Hex Head Bolt, Grade 5, ZP	2
201-0473	1/2"-13 x 2-3/4" Hex Head Bolt. Grade 5, ZP	4
201-0979	#12-14 x 1" Self Drilling Screw, ZP	2
202-0090	3/8"-16 Hex Nylon Insert Lock Nut, ZP	2
202-0094	1/2"-13 Hex Nylon Insert Lock Nut, ZP	4
203-0054	#10 Lock Washer, ZP	2
226-0046(not shown)	Class III Safety Cables	2
` ,	•	
,	·	
	Existing	Existing 8MM x 1.25" Bolt 61-8252 Inner Frame Mount 61-8253 BX2728 Baseplate 62-3468 Attachment Tab Assembly with Hole 101-9381 Electrical Bracket with Breakaway Switch Mount 201-0050 1/4"-20 x 3/4" Hex Head Bolt, Grade 5, ZP 201-0192 #10-32 1/2" Round Slotted Head Screw 201-0350 5/8"-11 x 1-1/2" Hex Head Bolt, Grade 5, ZP 201-0368 3/8"-16 x 1-1/4" Hex Head Bolt, Grade 5, ZP 201-0473 1/2"-13 x 2-3/4" Hex Head Bolt. Grade 5, ZP 201-0979 #12-14 x 1" Self Drilling Screw, ZP 202-0047 #10-32 Hex Nut 202-0090 3/8"-16 Hex Nylon Insert Lock Nut, ZP 202-0094 1/2"-13 Hex Nylon Insert Lock Nut, ZP 202-0102 1/4"-20 Hex Nylon Nut, ZP 203-0006 5/8" Flat Washer, ZP 203-0054 #10 Lock Washer, ZP 226-0046(not shown) Class III Safety Cables 229-0359(not shown) 3/8" Quicklink, ZP

#### **Important:**

Use only genuine factory replacement parts on your baseplate. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your baseplate, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 5, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty. Towing behind a non-motorized vehicle will void the warranty.

# 2019-2024 Kia Forte (Manual Only) (Includes GT) (No SCC or Round Fog Lights) Installation Instructions



1. Using a 10MM socket, remove the four (4) bolts from the top of the fascia.



2. Remove the three (3) push pins from along the edge of the wheel well. Then using an 8MM socket remove the one (1) bolt (inset). Do this on both sides of the vehicle.





3. Remove the ten (10) push pins from the underside of the fascia, four (4) on each side and two (2) in the middle. Remove fascia and set aside to be reinstalled later.



 Using a 10MM socket, remove the four (4) bolts, two (2) on each side from the front portion of the belly pan.





5. Using a 10MM socket, remove the two (2) bolts (white) from the passenger side and one (1) bolt (white) from the driver side of the belly pan. Then remove the one (1) push pin from each side of the belly pan (gray). Remove belly pan and set aside to be reinstalled later




6. **2022 Models:** Push down on top of electrical connection to release and disconnect running lights. Do this on both sides of the vehicle. Remove fascia and set aside to be reinstalled later.





7. **2019-2021 Models:** Using a 10MM socket, remove the three (3) bolts from the air baffle on the driver side of the vehicle. There are two (2) bolts on the outside of the frame and one (1) bolt on the backside. Remove baffle and set aside to be reinstalled later.

# 2019-2024 Kia Forte (Manual Only) (Includes GT) (No SCC or Round Fog Lights) Installation Instructions

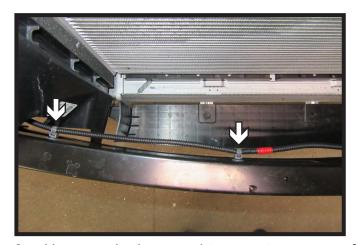



8. Unsnap wire loom and temperature sensor from the bumper, they will be repositioned later.




9. Using a 12MM socket, remove the four (4) bolts (white) from the bumper. Then using a 10MM socket, remove the one (1) nut (gray). Do this on both sides of the vehicle. Remove bumper and set aside, it will not be reinstalled later.



10. **2022 Models:** Remove the foam piece from the back side of the fascia by pinching in the two (2) clips to release. Foam piece will not be reinstalled.


### 2019-2024 Kia Forte (Manual Only) (Includes GT) (No SCC or Round Fog Lights) Installation Instructions

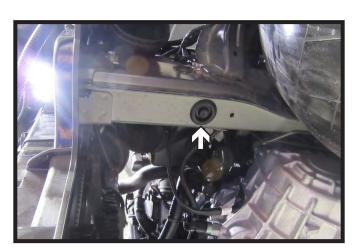


11. Remove the plastic plug from the bottom of the frame in front of the tire. Do this on both sides of the vehicle.



12. Insert frame support bracket as shown.
Start the one (1) 5/8" bolt from the bottom of the frame with hardware (inset). Do this on both side of the vehicle.

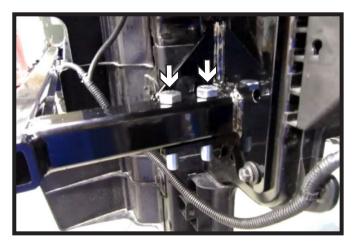

13. Slide the baseplate into place. Insert the two (2) 1/2" bolts without hardware into the baseplate lining up the baseplate and support bracket holes. Do this on both sides of the vehicle.

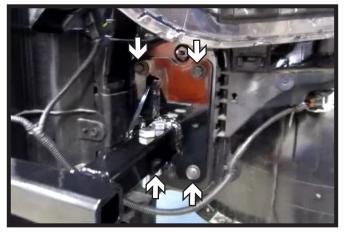


14. Install the four (4) existing 8MM bolts. Add hardware to the two (2) 1/2" bolts on the baseplate. Tighten all bolts at this time. Do this on both sides of the vehicle.

\*\* Use Loctite® Red on all bolt threads and tighten all bolts to the appropriate torque. \*\*



15. Using a 3/8" drill bit, drill the one (1) hole as indicated. Install the 3/8" bolt with hardware. Do this on both sides of the vehicle.





16. Snap the wire loom to the back of the baseplate using original clips. Then tuck the temperature sensor between the wire loom and the baseplate letting it hang just below the baseplate.



17. Attach the permanent baseplate safety cables to the provided convenience link on the baseplate. The photo above shows the recommended installation of the cables to frame of vehicle. Additional options may interfere with suggested mounting; in this case, secure the cables to a solid piece of the frame as described in the General Information sheet. Be sure the safety cables do not rub against any hoses or moving parts. Do this on **BOTH** sides of the vehicle.



18a. **2019-2021 Models:** Reinstall air baffle. Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the belly pan and fascia.



18b. **2022 Models:** Hold the fascia as close to its original position, mark and trim the fascia around the convenience links and attachment tabs. Reinstall the belly pan, fascia and reconnect all electrical.

#### CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our technical service team.

Additionally, please visit our website to see which rallies our Destination America team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

### **General Information**

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to use Loctite® Red on all bolts and tighten to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.
- 4. Remove the attachment tabs when not in use (if applicable).

### **Notice To Baseplate Installer**

- 1. It is YOUR responsibility to watch for:
  - Oil cooler and air conditioner lines
  - Electrical wires and hoses
  - Missing parts or attaching points on the frame
  - \*\* If the baseplate is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual baseplate installation.


#### **Permanent Baseplate Safety Cable Installation**

Permanent baseplate safety cables are strongly recommended when towing a vehicle with a tow bar. The principle function of the permanent baseplate safety cables is to prevent the towed vehicle from breaking loose in the event the connection between the frame of the towed vehicle and the baseplate fails or becomes disconnected. The cables must be connected from the baseplate to the frame rail or cross member of the vehicle's frame. The illustrations below show the possible arrangements recommended by Blue Ox®. Each permanent baseplate safety cable must have an adequate weight rating for the towing system. The weight rating of the two (2) cables together will not qualify.

Do not mount the permanent baseplate safety cables against wires, hoses or brake lines.


These permanent baseplate safety cables should remain installed as long as the baseplate is installed on the vehicle. Permanent baseplate safety cables are to be used in conjunction with, and NOT a replacement for legally required safety cables attaching the towed vehicle to the towing vehicle.



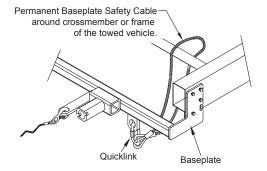

### Option #2

(Baseplates with out Convenience Link Tabs)

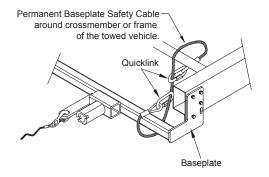

# BLUE OX ORIGINAL PURCHASERS THREE YEAR LIMITED WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for a period of three years from the date of delivery.

During said three-year period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <a href="http://blueox.com/warranty/">http://blueox.com/warranty/</a> to register your warranty

