Please visit www.blueox.com for the latest version of these installation instructions.



BXH3009

2017-2022 Chrysler Pacifica (No Hybrid) Installation Instructions

Please read the Installation Instructions prior to installing or operating this equipment.

- Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
- 2. Many Blue Ox® receiver hitches are designed to use existing holes and hardware to mount the hitch to the vehicle. Even though bolts are there, do not assume they are adequate for receiver hitch mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the rear of your vehicle looks different than this, please contact us at (402)385-3051.



Failure to read and follow these instructions could result in separation of the towed item from the vehicle, causing property damage, loss of towed item, personal injury or death.

Serial Number

Bolt Torque SpecificationsTorque in Foot-Pounds for Inch Bolts

Grade 5	Grade 8	
10	14	
19	29	
33	47	
54	78	
78	119	
154	230	
257	380	
	10 19 33 54 78 154	

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

WARNING

Refer to your vehicle's owner's manual for maximum towing capacity. <u>DO NOT</u> exceed vehicle, pin or hitch weight ratings - failure to follow vehicle manufacturer's recommendations could result in damage to your vehicle, personal injury or death.

Hitch Type	Max Gross Trailer Weight (GTW)	Max Tongue Weight (TW)	
Weight Carrying	4500 lb. (2041 kg)	675 lb. (306 kg)	
Weight Distributing	5000 lb. (2268 kg)	750 lb. (340 kg)	


Instruction Notes: The exhaust is lowered and reinstalled for the receiver hitch installation. The heat shield is removed and not reinstalled. Some trimming is required. No drilling required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the receiver hitch is installed.

The dimensional variations between otherwise identical vehicles can be considerable. While the receiver hitch was designed for easy installation, it may be necessary to tailor the hitch slightly to compensate for vehicle manufacturer's tolerances.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that ALL electrical connections are plugged in and accessories are functioning properly.
- The receiver hitch is tested to your vehicle's tow ratings, verify vehicle's tow rating because it may differ from receiver and use whichever is less. Exceeding this weight will void the manufacturer's warranty.
- Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the receiver hitch is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the hitch if it is damaged or missing parts.
- **DO NOT** alter this product in any way. Modifying this product could change the integrity and lead to a loss of connection between the towed item and the tow vehicle.
- The weight rating of the hitch assembly must be greater than the gross weight of the trailer.
- Without proper information, towing can be dangerous. Understand all risks involved with towing before starting. For more information on towing safety, see "The Trailer Handbook: A Guide to Understand Trailer and Towing Safety" from the National Association of Trailer Manufacturers, www.NATM.com.
- Check that all bolted connections are at the correct torque specification on a regular basis. Complete a visual inspection before towing each time.
- Ensure that installation is performed by someone who is aware of the risks and has knowledge of hazards
 and proper safety procedures involved with adding components to the chassis of a vehicle and the tools
 needed for installation.

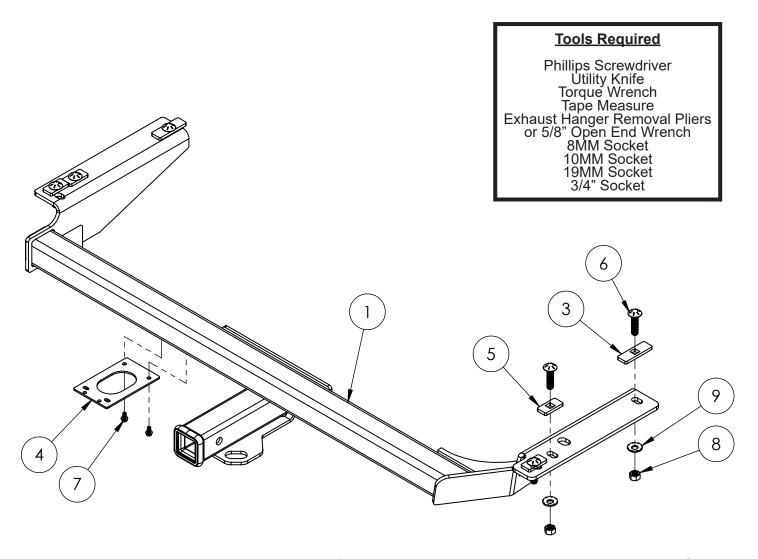


Item No.	Part No.	Description	Qty.
		Receiver Hitch, 2"	
2	63-5102(not shown)	Bolt Bag & Manual Package	1
3	101-10556	1/4" x 1" x 3" Plate with Square Hole	2
4	101-11013	Electrical Mounting Plate	1
5	101-11298	1/4" x 1" x 2" Spacer Plate with Square Hole	4
6	201-1179	1/2"-13 x 2" Carriage Bolt, Grade 8, YZP	6
7	201-1189	1/4"-20 x 1/2" Hex Head Tread Forming Screw	2
8	202-0268	1/2"-13 Hex Nut, Grade 8, YZP	6
9	203-0218	1/2" Conical Washer, YZ	6
		1/2" x 48" Bolt Leader	

Important:


Use only genuine factory replacement parts on your hitch receiver. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your hitch receiver, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 8, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty.



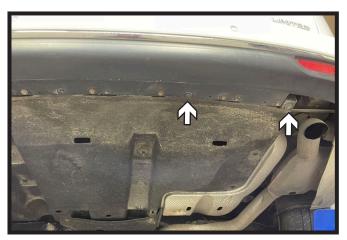


1. Using an 8MM socket, remove the six to eight (6-8) bolts from the underbody panel.


Note: The number of bolts depends on the model of the vehicle.

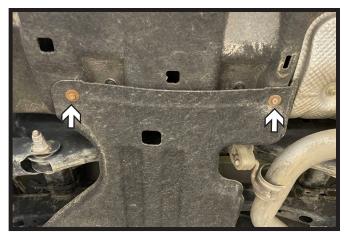

2. Using a 10MM socket, remove the two (2) bolts from the secondary panel, let panel hang.

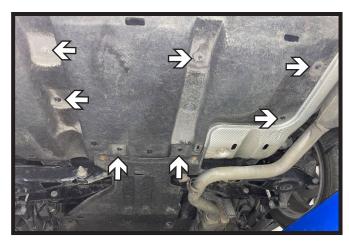

Using a 10MM socket, remove the seven(7) plastic nuts from the underbody panel.

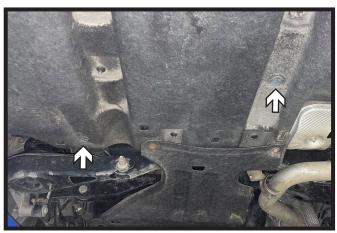

 Using a phillips screw driver, remove the two (2) plastic plugs from the underbody panel.



 Using an 8MM socket, remove the three
 (3) bolts from the wheel well, behind the tire on the driver side of the vehicle. Remove the underbody panel and set aside to be reinstalled later.







6. Support exhaust using a jack or stand. Remove the three (3) rubber isolators from the exhaust rods, one (1) in the center of the vehicle and two (2) on the passenger side. Lower exhaust to allow receiver hitch installation.

Note: This can be done using Exhaust Hanger Removal Pliers or a 5/8" Open End Wrench.





7. Using a 10MM socket, remove the two (2) nuts from the heat shield on the passenger side of the vehicle. Set heat shield aside, it will not be reinstalled.



 Using a 10MM socket, remove the nut attaching the ground wire to the frame on the driver side of the vehicle. It will be reinstalled later.



9. Starting with most rear hole in the frame (white), feed lead wire from the rear hole to the forward access hole in the frame (black). Place 1" x 2" spacer plate onto wire then attach lead wire to the end of the 1/2" carriage bolt (inset). Ensure spacer plate is sitting flush against inner frame and the bolt is hanging vertically. Repeat with second most rear hole (gray). Do this on both sides of the vehicle.



10. Place 1" x 3" spacer plate onto the lead wire then attach lead wire to the end of the 1/2" carriage bolt. Feed bolt then plate through the access hole. Ensure spacer plate is sitting flush against inner frame and the bolt is hanging vertically. Do this on both sides of the vehicle.



11. Raise the receiver hitch into place feeding the lead wires through the corresponding holes in the receiver. Remove lead wires and loosely install a conical washer and hex nut onto each bolt. Ensure the teeth on the conical washers are towards the hitch. Do this on both sides of the vehicle. Tighten all bolts.

Note: When installing the hex nuts be careful not to push bolts into fame.

** Tighten 1/2" bolts to 119 ft/lbs. **




12. Raise the exhaust back into place and reinstall the rubber isolators.

Note: Rear passenger side rubber isolator may be difficult to reinstall.





13. Flatten tab on the ground wire connector. Then reinstall ground wire to the original position on the driver side of the vehicle.

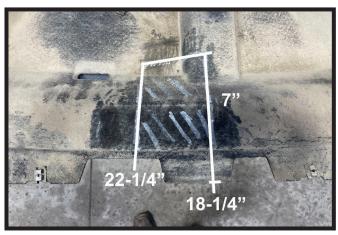

14. Measuring from the passenger side of the underbody panel, measure 18-1/4" to 22-1/4" from the edge and mark. Then measure 7" from the rear edge. Mark rectangle area as shown.



15. Using a utility knife cut the marked area as shown.



16. Reinstall underbody panel the bolts from secondary panel.



CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer service team.

Additionally, please visit our website to see which rallies our team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.



© 2024 Blue Ox One Mill Road, Industrial Park Pender, Nebraska 68047 Phone: (402) 385-3051 Fax: (402) 385-3360 www.blueox.com

General Information

- 1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/ or recalls.
- 2. It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip. Be sure to tighten all bolts to the recommended specifications.
- 3. It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.

Notice To Receiver Hitch Installer

- 1. It is YOUR responsibility to watch for:
 - Electrical wires and hoses
 - Missing parts or attaching points on the frame
 - ** If the hitch receiver is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual hitch installation.

BLUE OX ORIGINAL PURCHASERS LIMITED LIFETIME WARRANTY

Automatic Equipment Manufacturing Company ("Automatic") warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for as long as the original retail purchaser owns the product.

During said period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic's sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit http://blueox.com/warranty/ to register your warranty

