



BXH2007

2005-2017 Chevy Equinox 2010-2017 GMC Terrain Installation Instructions

Please read the Installation Instructions prior to installing or operating this equipment.

1. Blue Ox® towing products and accessories are intended to be installed by Blue Ox® Dealers who are familiar with our products and have the equipment and knowledge necessary to do "fit work". If needed, Blue Ox® Dealers can be found at www.blueox.com or by contacting our Customer Care Department at (402) 385-3051.
2. Many Blue Ox® receiver hitches are designed to use existing holes and hardware to mount the hitch to the vehicle. Even though bolts are there, do not assume they are adequate for receiver hitch mounting. Always use the hardware supplied in the hardware kit and existing hardware as specified in the installation instructions.



If the rear of your vehicle looks different than this, please contact us at (402)385-3051.

Serial Number

Bolt Torque Specifications

Torque in Foot-Pounds for Inch Bolts

Bolt Size	Grade 5	Grade 8
1/4"	10	14
5/16"	19	29
3/8"	33	47
7/16"	54	78
1/2"	78	119
5/8"	154	230
3/4"	257	380

Bolt Torque Specifications

Torque in Foot-Pounds for Metric Bolts

Bolt Size	Grade 8.8	Grade 10.9
6MM	6	8
8MM	16	22
10MM	31	40
12MM	54	70
14MM	89	117
16MM	161	230
18MM	222	318

WARNING

Failure to read and follow these instructions could result in separation of the towed item from the vehicle, causing property damage, loss of towed item, personal injury or death.

WARNING

Refer to your vehicle's owner's manual for maximum towing capacity. **DO NOT** exceed vehicle, pin or hitch weight ratings - failure to follow vehicle manufacturer's recommendations could result in damage to your vehicle, personal injury or death.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions

Hitch Type	Max Gross Trailer Weight (GTW)	Max Tongue Weight (TW)
Weight Carrying	4500 lb. (2041 kg)	675 lb. (306 kg)
Weight Distributing	4500 lb. (2041 kg)	675 lb. (306 kg)

Instruction Notes: On GMC models the exhaust is lowered and reinstalled for the receiver hitch installation. The rear fascia piece is removed and remains off on GMC models. No drilling or trimming is required.

Place all components that are removed on a flat, sturdy surface. All items will be reinstalled unless otherwise noted after the receiver hitch is installed.


The dimensional variations between otherwise identical vehicles can be considerable. While the receiver hitch was designed for easy installation, it may be necessary to tailor the hitch slightly to compensate for vehicle manufacturer's tolerances.

NOTICE

- Handling of some cosmetic parts when installing this product may require the use of protective covers, rags, specialty tools, etc. to prevent damage.
- When using power drills be aware of the dangers of torque and drill bit length.
- When using a reciprocating saw be aware of objects behind the cutting surface.
- Use a good quality paint to spray cut edges of frame to prevent rusting.
- Be sure that **ALL** electrical connections are plugged in and accessories are functioning properly.
- The receiver hitch is tested to your vehicle's tow ratings, verify vehicle's tow rating because it may differ from receiver and use whichever is less. Exceeding this weight will void the manufacturer's warranty.
- Tighten all bolts according to the torque chart provided unless specified.
- Dealer or installer be certain the user receives these instruction sheets.
- If the receiver hitch is in an accident, it must be replaced. **DO NOT** use it again! An accident can cause unseen damage and using it again could result in more damage or serious injury. **DO NOT** use the hitch if it is damaged or missing parts.
- **DO NOT** alter this product in any way. Modifying this product could change the integrity and lead to a loss of connection between the towed item and the tow vehicle.
- The weight rating of the hitch assembly must be greater than the gross weight of the trailer.
- Without proper information, towing can be dangerous. Understand all risks involved with towing before starting. For more information on towing safety, see "**The Trailer Handbook: A Guide to Understand Trailer and Towing Safety**" from the *National Association of Trailer Manufacturers*, www.NATM.com.
- Check that all bolted connections are at the correct torque specification on a regular basis. Complete a visual inspection before towing each time.
- Ensure that installation is performed by someone who is aware of the risks and has knowledge of hazards and proper safety procedures involved with adding components to the chassis of a vehicle and the tools needed for installation.

BXH2007
 2005-2017 Chevy Equinox
 2010-2017 GMC Terrain
 Installation Instructions

Tools Required
Flat Screwdriver
Torque Wrench
18MM Socket
19MM Socket
3/4" Socket
8" Extension
Swivel Adaptor

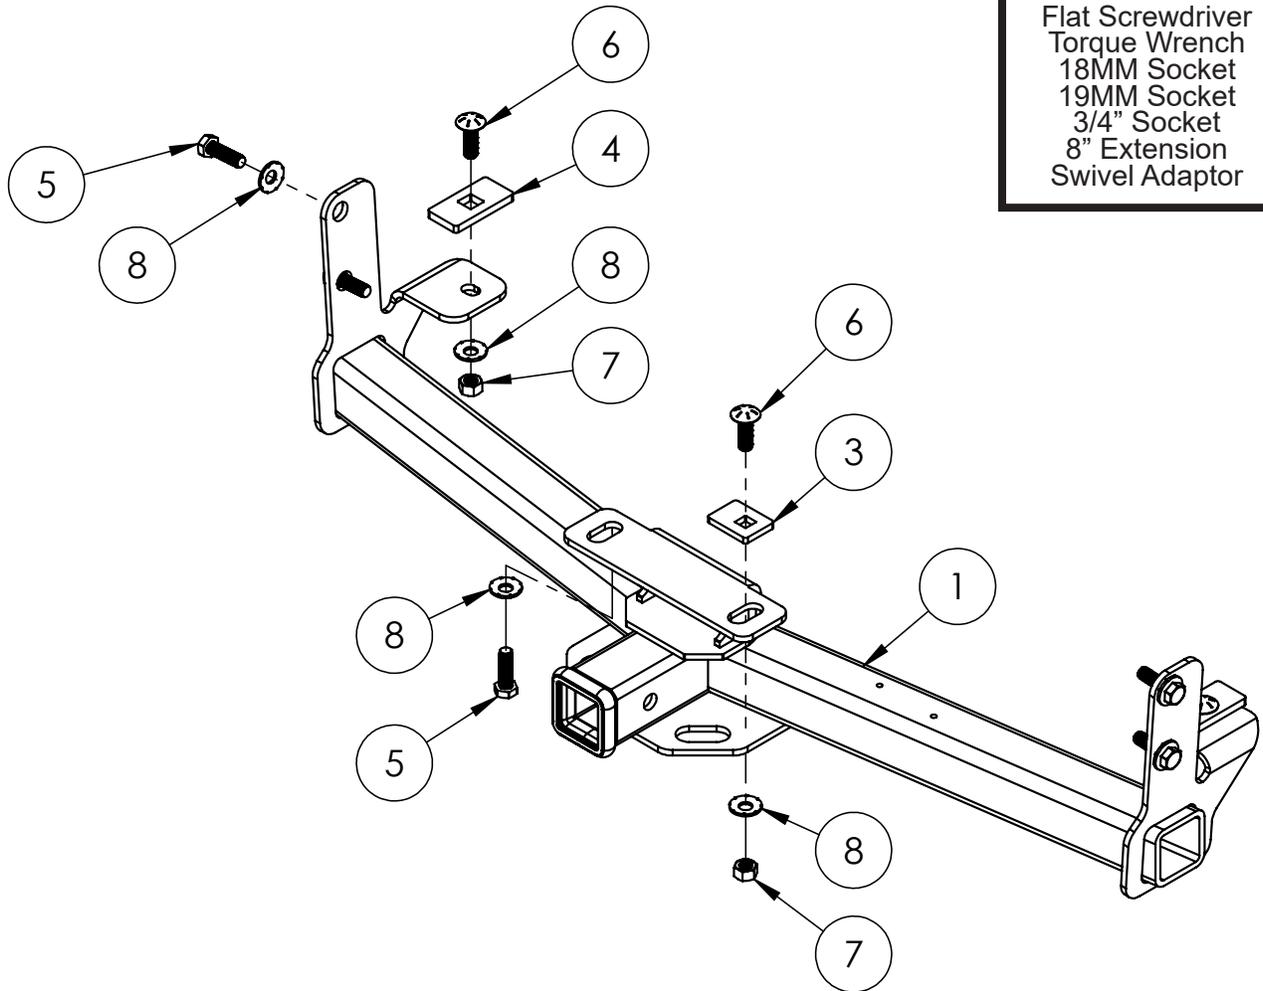

Item No.	Part No.	Description	Qty.
1.....	61-8801	Receiver Hitch, 2"	1
2.....	63-5137(not shown)	Bolt Bag & Manual Package.....	1
3.....	101-11034	1/4" x 1-1/2" x 2" Plate with Carriage Bolt Square Hole ..	2
4.....	101-11061	5/16" x 1-1/2" x 3" Spacer Plate with 5/8" Square Hole ...	2
5.....	201-0669	12MM-1.75 x 40MM Hex Head Bolt, Grade 8.8	6
6.....	201-1176	1/2"-13 x 1-1/2" Carriage Bolt, Grade 8, YZP	4
7.....	202-0268	1/2"-13 Hex Nut, Grade 8, YZP	4
8.....	203-0218	1/2" Conical Washer, YZ.....	10
9.....	229-0955(not shown)	1/2"-13 x 48" L Bolt Leader.....	4

Important:

Use only genuine factory replacement parts on your hitch receiver. Do **NOT** substitute homemade or non-typical parts. If a bolt is lost or in need of replacement, for your safety and the preservation of your hitch receiver, be sure to use a replacement bolt of the same grade (In most cases it will be Grade 8, please reference the parts list above). Replacement parts may be ordered through your nearest Blue Ox® Dealer or Distributor. Failing to follow and/or altering these installation instructions in either installation or required equipment will void the manufacturer's warranty.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions



1a. **Terrain Models:** Using a flat screw driver release the four (4) clips attaching the bottom rear fascia piece. Remove piece, it will not be reinstalled.




1b. **Equinox Models Optional:** Use a flat screw driver to release the three (3) clips attaching the bottom rear fascia piece. Remove piece to allow for hitch installation clearance. Depending on clearance the piece may be reinstalled.




2. **Terrain Models:** Support exhaust using a jack or stand. Remove the three (3) rubber isolators from exhaust rods. There is one (1) on each side of the vehicle and one (1) in the center towards the front. Lower exhaust to allow receiver hitch installation.

Note: This can be done using Exhaust Hanger Removal Pliers or a 5/8" Open End Wrench.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions

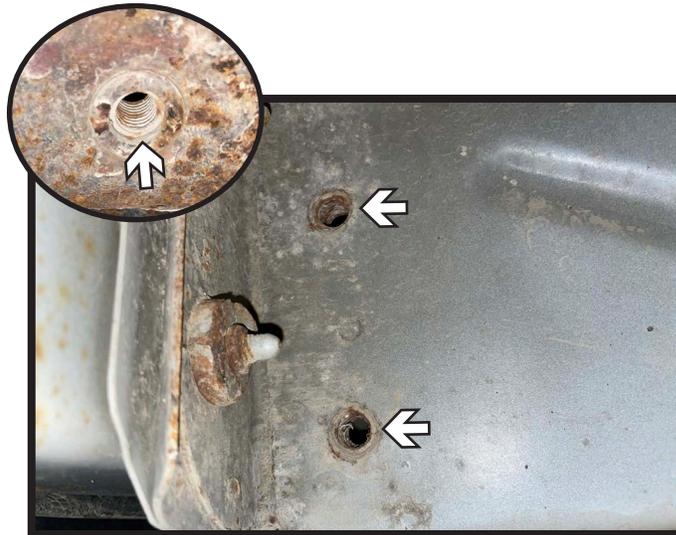


3. Clean area around existing holes needed for receiver hitch installation using a wire brush and spray lubricant. Then run a 12MM x 1.75 tap through the holes. Do this on both sides of the vehicle.

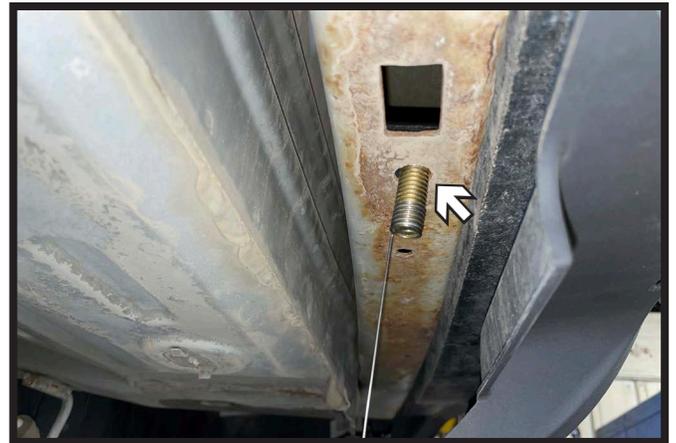

4. **Vehicle without Weld Nut:** If the vehicle does not have a weld nut in the rear center frame hole then feed the lead wire from rear center hole and out the end of the frame. Place spacer plates onto wire then attach lead wire to the end of the 1/2" carriage bolt. Pull bolt and spacer plate through the frame. Ensure spacer plate is sitting flush against inner frame and the bolt is horizontal. Do this on both sides of the vehicle.

Note: On vehicles with a weld nut a 12MM-1.75 bolts with conical washers will be used during installation.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions

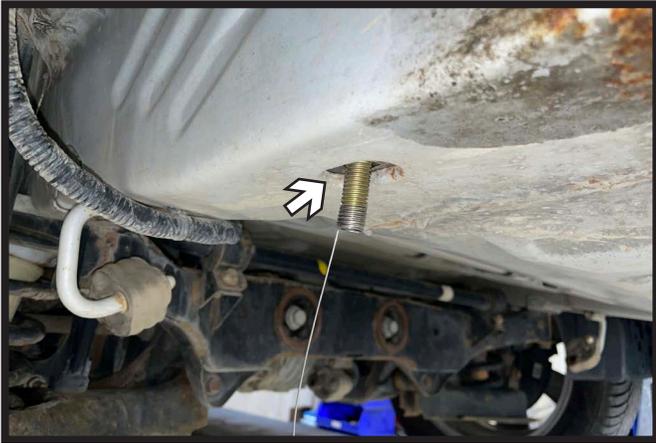

5. Place a spacer plate onto a 1/2" carriage bolt then attach the lead wire to the end of the bolt. Feed the bolt then spacer plate through the bottom frame hole on each side of the vehicle. Ensure the spacer plate is sitting flush against inner frame and the bolt is hanging vertically. Do this on both sides of the vehicle.




6. Feed lead wires through holes in the receiver hitch. Raise hitch into place. Start a 12MM bolt with conical washer into the bottom side hole. Ensure the teeth of the conical washer are towards the hitch. Leave loose. Do this on both sides of the vehicle.



7. Remove lead wire from bottom end bolt and loosely install a 1/2" conical washer with hex nut onto bolt. Ensure the teeth of the conical washer are towards the hitch. Leave loose. Do this on both sides of the vehicle.


Note: When installing nut be careful not to push bolts into frame.

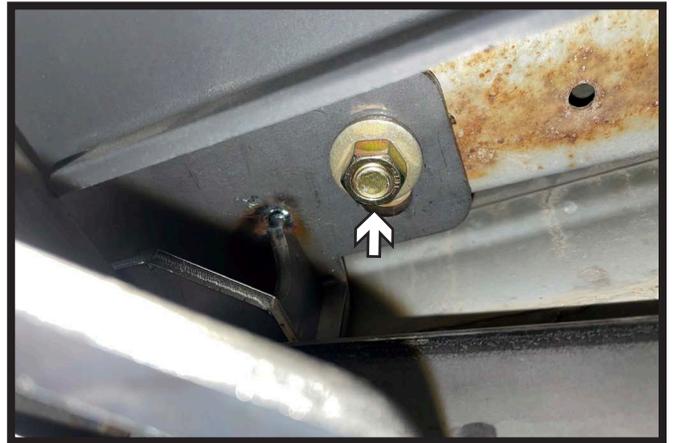

- 8a. **Vehicle without Weld Nut:** Remove lead wire from bottom center bolt and loosely install 1/2" conical washer with hex nut onto bolt. Ensure the teeth of the conical washer are towards the hitch. Leave loose. Do this on both sides of the vehicle.

Note: When installing nut be careful not to push bolts into frame.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions

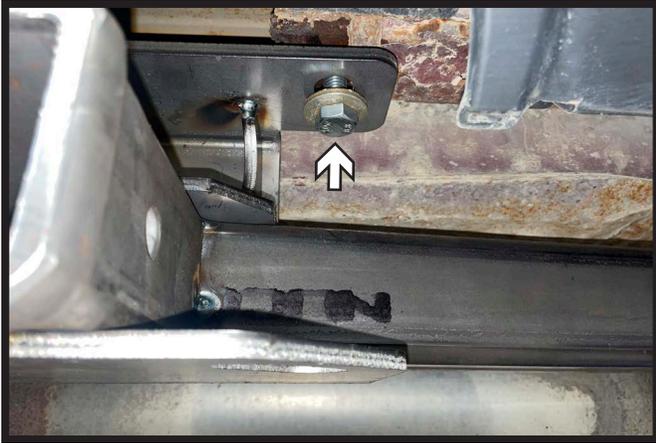

8b. **Vehicle with Weld Nut:** Start a 12MM bolt with conical washer into the bottom center frame hole. Ensure the teeth of the conical washer are towards the hitch. Leave loose. Do this on both sides of the vehicle.




9. Start a 12MM bolt with conical washer into the side top hole. Ensure the teeth of the conical washer are towards the hitch. Leave loose. Do this on both sides of the vehicle.



10. Tighten all bolts at this time starting with the bottom side bolts, then bottom center bolts, and finally the side frame bolts.

**** Tighten 1/2" bolts to 119 ft/lbs ****

**** Tighten 12MM bolts to 54 ft/lbs ****

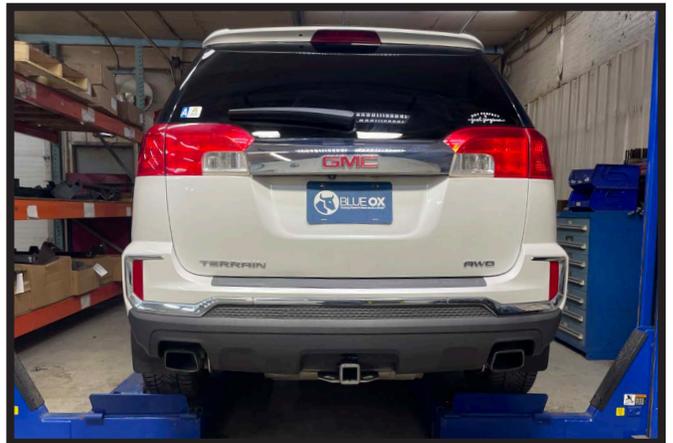

11. Raise the exhaust and reinstall rubber isolators.

BXH2007
2005-2017 Chevy Equinox
2010-2017 GMC Terrain
Installation Instructions

General Information

1. Ensure that your product(s) are registered online at www.blueox.com. It is crucial to register your product(s) so that you may be alerted of product offerings, updates, upgrades, maintenance and safety bulletins, and/or recalls.
2. **It is the owner's responsibility to inspect all towing equipment for cracked welds, missing or worn parts and loose bolts before each towing trip.** Be sure to tighten all bolts to the recommended specifications.
3. **It is the owner's responsibility to hook up all towing equipment per manufacturer's instructions/recommendations.**

Notice To Receiver Hitch Installer

1. **It is YOUR responsibility to watch for:**

- Electrical wires and hoses
- Missing parts or attaching points on the frame

** If the hitch receiver is improperly installed and is against a wire or hose, it could cause fluid leaks or electrical shorts some time after the actual hitch installation.

CUSTOMER SERVICE COMMITMENT

Blue Ox® is committed to providing you with exceptional customer care throughout your lifetime with our products. Our team is here to assist you with any questions you may have regarding the performance of your product. Simply call (402) 385-3051 and you can speak with our customer service team.

Additionally, please visit our website to see which rallies our team will be attending. For a nominal fee, our service technician will service your towing system to ensure it's in proper working condition. Also, as a commitment to our customers, should you visit our factory, you can stay at our full service Blue Ox® campground at no charge along with enjoying a factory tour.

Again, thank you for being our customer and for the confidence you have shown in the performance of our products. It is because of customers like you we enjoy the success we have today.

© 2024 Blue Ox
One Mill Road, Industrial Park
Pender, Nebraska 68047
Phone: (402) 385-3051
Fax: (402) 385-3360
www.blueox.com

BLUE OX ORIGINAL PURCHASERS LIMITED LIFETIME WARRANTY

Automatic Equipment Manufacturing Company (“Automatic”) warrants to the original (first) retail purchaser that this product, manufactured by Automatic, shall be free from defect in material and workmanship under normal use and service for as long as the original retail purchaser owns the product.

During said period, Automatic will repair or replace any parts that have been returned by the original purchaser, to the factory, transportation prepaid, and in Automatic’s sole and absolute opinion found to be defective.

Limitations on Warranty Coverage:

Coverage under this warranty will be valid only if the customer warranty card is returned by the original purchaser within 30 days of purchase.

Coverage under this warranty will be effective only when a copy of the original invoice, showing date and place of purchase, accompanies any claim for warranty. This warranty is NON TRANSFERABLE.

This limited warranty will not cover, in any way or form, any alleged damages caused by incorrect or improper installation, improper use, modification or neglect of product, failure to properly service and maintain, misuse, act of God, accident or failure of the user to follow guidelines contained in the instructional material provided by Automatic.

This warranty does not cover normal wear and tear, paint or rust.

Warrantor assumes no responsibility to the owner for loss of use of product, loss of time, inconvenience or any other damage consequential or otherwise. Including, but not limited to mileage, expense of transporting of product, return shipping expense, mechanics travel time, telephone, road service, towing, and rental during repairs, travel, lodging, loss or damage to personal property or loss of earnings.

REPAIR OR REPLACEMENT AS SET FORTH IN THIS LIMITED WARRANTY IS THE SOLE EXCLUSIVE REMEDY OF THE PURCHASER. AUTOMATIC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN LENGTH TO THE DURATION OF THIS WARRANTY.

Please visit <http://blueox.com/warranty/> to register your warranty

